

INTERFOR
USA GROUP INC.
D I L I G E E T Q U O D V I S F A C

OWNER'S MANUAL
UZI®¹ SMG semiauto clones
9x19 cal.

Thank you for your purchase.

The gun you have just purchased is a delayed roller locked operating, built starting from a flat bent receiver and original IMI UZI® or licensed parts. The gun has been built following official ATF guidelines and is as similar to the original full auto original as legally possible.

¹ UZI is a trademark of Israel Weapons Industries. Interfor is not related to IWI and reference to UZI is only to be intended to the type of firearms, not their commercial denomination.

Your gun, depending on the model can be registered as a pistol or a rifle. If registered as a pistol it can be provided with a fixed or folding brace (depending on the model) while in rifle conversion has a 16" barrel and a stock (fixed or folding, depending on version).

Buying and using this firearm implies acceptance of the following safety rules (from the site <https://gunsafetyrules.nra.org>) :

1. ALWAYS KEEP THE GUN POINTED IN A SAFE DIRECTION

This is the primary rule of gun safety. Common sense dictates the safest direction, depending on different circumstances.

2. ALWAYS KEEP YOUR FINGER OFF THE TRIGGER UNTIL READY TO SHOOT

When holding a gun, rest your finger alongside the frame and outside the trigger guard. Until you are actually ready to fire, do not touch the trigger.

3. ALWAYS KEEP THE GUN UNLOADED UNTIL READY TO USE

If you do not know how to open the action or inspect the chamber(s), leave the gun alone and get help from someone who does.

4. KNOW YOUR TARGET AND WHAT IS BEYOND IT.

5. WEAR EYE AND EAR PROTECTION AS APPROPRIATE.

Guns are loud and the noise can cause hearing damage. They can also emit debris and hot gasses that could cause eye injury. For these reasons, shooting glasses and hearing protection should be worn by shooters and spectators.

Ear and eye protection is specially important in case of a **slamfire or out of battery firing** (unexpected firing with the bolt not completely close) which can happen with any gun due to debris or dirt, malfunction of parts, dropping etc.

Not being completely close, a gun firing out of battery can eject debris or hot gases and only proper eye and hear protection can prevent injury.

6. BE SURE THE GUN IS SAFE TO OPERATE.

Just like other tools, guns need regular maintenance to remain operable. Regular cleaning and proper storage are a part of the gun's general upkeep.

Check proper gun functioning before shooting activities and consult a knowledgeable gunsmith in case of any doubt.

7. Know how to use the gun safely.

Before handling a gun, learn how it operates. Know its basic parts, how to safely open and close the action and remove any ammunition from the gun or magazine. Remember, a gun's mechanical safety device is never foolproof. Nothing can ever replace safe gun handling.

8. DO NOT CARRY THE GUN WITH A ROUND IN THE CHAMBER

Gun safeties are not necessarily 100% safe and should not be relied upon to carry, handle, or transport a gun with a round in the chamber. A round must be inserted in the chamber only immediately prior to firing and the chamber must be emptied at the end of shooting activities.

FOR THIS REASON IT IS MANDATORY TO CARRY THE GUN UNLOADED WITH AN EMPTY CHAMBER and a bullet be loaded only when in pointing in direction of target just ahead of firing.

If you do not want to abide to these rules please DO NOT USE THE GUN.

AS THIS GUN IS BASED ON AN OBSOLETE DESIGN AND MODIFIED FROM THE ORIGINAL DESIGN TO COMPLY WITH ATF SPECIFICATIONS, IT MUST NOT CONSIDERED SAFE FOR ANY USE EXCEPT COLLECTING OR TARGET SHOOTING, AND CERTAINLY NOT FOR SELF DEFENSE OR HUNTING USE.

UZI STYLE FIREARM SPECIFIC INSTRUCTIONS:

- 1. RUN PERIODICAL CLEANING OF THE GUN, INCLUDING THE FREE FLOATING FIRING PIN.**
- 2. AT EVERY CLEANING CHECK THAT THE FIRING PIN IS FREELY MOVING IN AND OUT THE FRON OF THE BOLT.**
- 3. NEVER FIRE A GUN WITH A STUCK FIRIN PIN AS THIS COULD RESULT IN AN UNWANTED DISCHARGE. IN CASE CONTACT INTERFOR USA GROUP OR A CERTIFIED ARMORER FOR A PROPER CHECK OF THE GUN.**
- 4. ALWAYS POINT THE FIREARM IN A SAFE DIRECTION WHEN CHAMBERING A BULLET TO PREVENT FIRE IN CASE OF A STUCK FIRING PIN.**
- 5. ALWAYS CHECK LUBRICATION OF THE GUN AND THE BOLT BEFORE FIRING AND AFTER CLEANING.**
- 6. DO NOT CARRY THIS GUN WITH A ROUND IN THE CHAMBER.**
- 7. DO NOT USUALLY LOAD THE MAGAZINE WITH MORE THAN 20-25 ROUND AS THE POWER OF A FULLYLOADED MAGAZINE SPRING CAN INTERFERE WITH THE GUN'S OPERATING. ORIGINAL OPERATORS OF THIS TYPE OF FIREARMS NEVER LOADED MAGAZINES WITH MORE THAN 25 ROUND TO INSURE PROPER RELIABILITY.**

OPERATING INSTRUCTIONS

This gun is not designed or intended for the use of beginner shooters, as it requires particular competence on firearms use. If you do not know how to use this gun or its functioning is not clear DO NOT LOAD IT and consult an expert.

LOADING

1. Choose a safe place for gun handling ; your bedroom or home are NOT safe places for gun handling. Only appropriate areas of gun ranges can be considered safe.
2. Extract the gun from the box or bag, always keeping the finger OFF the trigger and the gun pointed in a safe direction (a backstop or target area).
3. Pull the cocking lever (on the side of the gun) check the chamber is empty (no bullet inside the chamber)
4. Pull and release the lever more times to check that everything is working and the gun is not dirty or the barrel obstructed.
5. With gun pointed in safe direction, finger still off trigger, load a loaded magazine in the magazine well.
6. Always pointing in a safe direction and with finger off trigger, pull the loading lever all the way and load the first round.
7. If you haven't a full comprehension of how the gun operates, always keeping off the trigger and gun pointed in a safe direction, extract the magazine, pull the lever to clean the chamber from a bullet, check the chamber is empty, put down gun in a safe position and look for competent help in the form of an instructor.

In general **never hold the gun with the forward hand on the magazine or in correspondence of the muzzle of the barrel**. The correct position for fire is depicted in the following image:



Correct use of a UZI® style blowback gun: front hand on handguard and rear hand with finger off the trigger.

8. With the gun still in a safe direction, put your finger on the trigger and pull once. The gun will fire its first round. Check gun pointing and surrounding area and shoot more rounds if necessary, in a slow deliberate manner. Once all rounds are fired or if you decide to stop shooting take your finger off the trigger, keep the gun in a safe direction, engage safety and extract magazine. It is not finished yet: pull the lever and free the chamber from the eventual live round, check the chamber, close the bolt and dry fire in a safe direction. Install a chamber flag (a plastic flag which prevents the accidental chambering of a round – put the gun down in a safe position and always pointed in a safe direction.

ALWAYS FIRE IN A SLOW DELIBERATE MANNER, TAKING CARE THAT YOUR FORWARD HAND DOES NOT SLIDE IN FRONT OF THE BARREL DUE TO RECOIL OR A TOO HIGH RATE OF FIRE.

MAKE EXPERIENCE ON THE GUN WORKING BEFORE FAST FIRING, IN CASE CONSULT AN APPROPRIATE INSTRUCTOR.

IMPORTANT NOTE: this gun has been modified from its original configuration as by ATF guidance. Like the original, this model has no hold open system. If you need to check the chamber hold the gun with your strong hand and pull back the loading lever on top of gun. Refer to following image for the identification of parts and their position.

Never insert your finger inside the gun receiver as the bolt could slam abruptly in the closed position, with a severe injury possibility.

PARTS AND OPERATING COMMON TO ALL FIREARM MODELS


CLEANING AND MAINTENANCE

Periodic cleaning of a firearm is paramount for its correct functioning.

Cleaning operations:

Always use safety glasses or goggles; firearms contain springs which can jump out of the firearm. Always protect eyes.

Always keep the gun pointed in a safe direction and keep finger off the trigger. Check the chamber is empty pulling the loading lever; if it is not unload it.

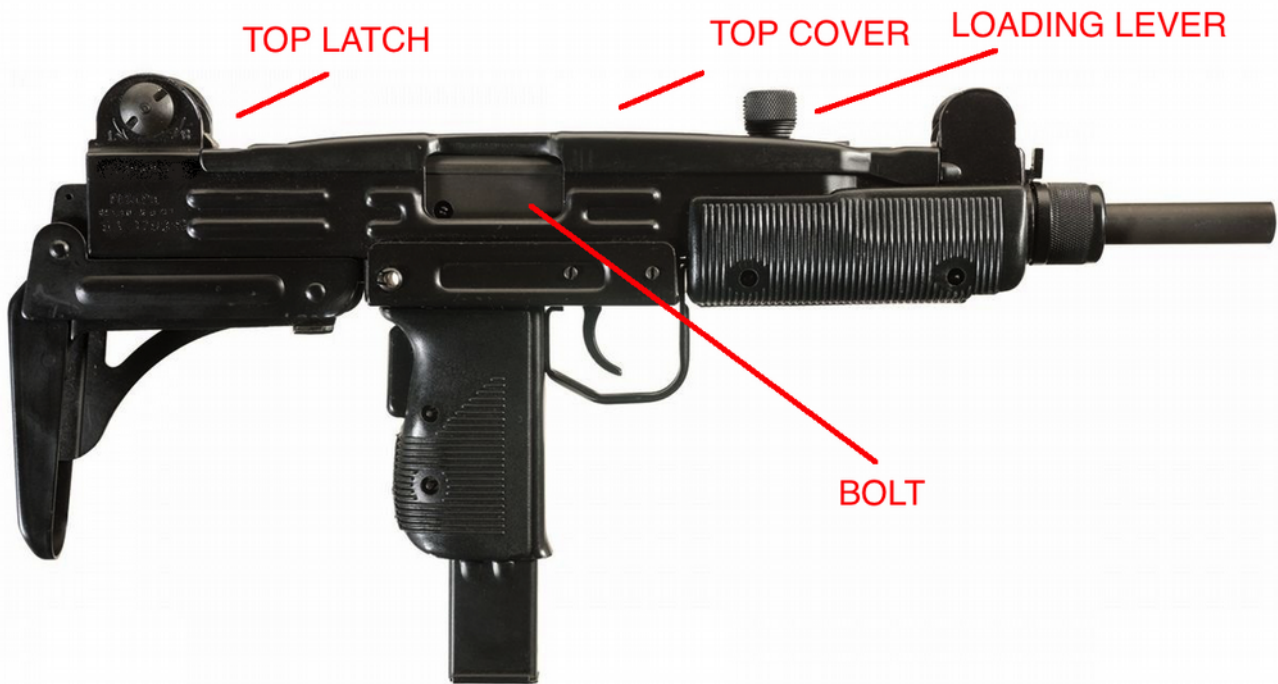

Push back the rear latch on top of the gun. Remove the top cover.

Remove the bolt pushing it slightly back.

Remove the rods and the striker

Spray a cleaning product over the trigger system and swipe with a clean rag. Clean the inside of barrel.

NO FURTHER DISASSEMBLY IS NECESSARY OR ADVISED.

Reassemble the gun in the opposite sequence. Check all functions, store the gun unloaded and with an empty chamber.

WARRANTY

Interfor USA Group Inc. Will warranty this product against defects of materials and workmanship for one year since the original date of sale.

If return to Interfor USA Group Inc. should be necessary for warranty or repairs, please contact us via www.interfor.us site or call us at 832.542.1587, or write to Interfor USA Group Inc. 12515 Maxim Drive 77065 Houston, Texas, USA.

If the manual for this gun is missing or damaged please download a new copy from www.interfor.us Internet site.

ALL RIGHTS RESERVED